Hand Bearing Packer

BEP-10

Light-weight and handy, portable Bearing Packer

Mess and hassle free solution for quick removal of old grease and replacement with new grease

Designed for use on bearings with:

- · Minimum dia. of 1-3/4" (45mm)
- Maximum dia. 3-1/2" (90 mm)

Using the bearing packer

Simple hand press mechanism eliminates the need for any grease gun or pump to grease the bearing

Useful for greasing bearings in cars, boats, tractors, RV's etc







Place bearing on piston Maximum bearing dia. 3-1/2" (90mm)



Press the cap until the old grease is forced out and new grease shows on the bearing

USEFUL TIPS!

Always use recommended grade of grease. Some grades of grease cannot handle temperature of wheel bearing applications

Do not use compressed air for cleaning the bearing prior to use with the bearing packer. This is unsafe and could damage the race

ORDERING INFORMATION

CAT	ORD	BOX
NR.	NR.	QTY.
BEP/10	44940	25





Cap protects grease from contaminants